GM46T (Matter) Mini & Hidden Curtain Motor User Manual

Please read this manual carefully before using the product!

Edition:1.0



Do not strike.

 
collide and fall

orcefully pull the curtain

Functions Soft start (Can

After installation, do not

Soft start(Cancelable)+stop when blocking + electric stroke + slow start and stop + overtime protection + remote control + reset + reverse setting + speed regulation + dry contact (optional) + Turys/Smartlife control(optional) + Turys/Smartlife c



Rated voltage: AC90-240V 50/60Hz Working temp: -5°C -45°C Rated Power: 18W Rated torque: 1.5N' m Noise: 435dB Speed: 14 cm/s Protection grade: 1941 Insulation class: E Remote: 433 324hz Zigbee: 2 46Hz APP: Two smart/Smartife

Use after firmly installing



Indicator

Note:

- Make sure the connection between power cable and socket is tight;
- Select a plug style that is suitable to your local power socket.

Module plug-in design





Standard interface and specifications



AC Power cable



Hot-swap and Fast plug-in



Secondary development and customization

Settings Enter the setting state The setting state goes out 0. within 10 seconds if there is Long press the setting Release the button when Done no other operation! button for 3 seconds the indicator is bright Learn code Click the up button The motor is in Done setting state on the remote once It is effective only when the the Click the setting button once Done remote in use has been learned! Reverse Settings The working direction of all the controls will be reversed after setting! The motor is in setting state Click the down button once Soft start It is effective only when the the Ω. remote in use has been learned! The motor is in Click the middle Done setting state button once Motor networking Quickly click the setting Add devices through Done button for 3 times apps or smart speaker ●The indicator goes out in 6 Speed setting seconds automatically if <u>aa</u> there are no more operations. 9. ٥. Quickly click the setting Click the setting button, 3 levels are settable. Done button for 4 times the flash times of indicator shows the speed levels Default speed level is 2. Reset (Clear Code) The motor is in Long press the setting Done setting state button for 3 seconds

