X10 Mini & Hidden Curtain Motor User Manual

Please read this manual carefully before using the product!

Edition:1.0





No entry into water



Do not disassemble



Do not plug in before completing installation



After installation, do not orcefully pull the curtain



Do not strike, collide and fall



Use after firmly installing

Functions

Soft start(Cancelable)+stop when blocking + electric stroke + slow start and stop + overtime protection+ remote control + reset + reverse setting + speed regulation + dry contact (ootlonal) + Truya / Smartific control (bottonal)





Rated voltage: A:S0-240V 50/60Hz Working temp:-5°C-45°C Rated Power: JaW Rated torque: 1.8N·m Noise: 4336B Speed: 14cm/S Overtime protection: 4min Protection grade: IP41 Insulation class: E Remote: 433.92Mhz Zigbee: 2,66Hz

APP: Tuva smart/Smartlife

Power wiring





AC Power cable

Note:

- Make sure the connection between power cable and socket is tight;
- Select a plug style that is suitable to your local power socket.

Module plug-in design





Standard interface and specifications





Hot-swap and Fast plug-in



Secondary development and customization

Settings Enter the setting state The setting state goes out 0. within 10 seconds if there is Long press the setting Release the button when Done no other operation! button for 3 seconds the indicator is bright Learn code Click the up button The motor is in Done setting state on the remote once It is effective only when the the Click the setting button once Done remote in use has been learned! Reverse Settings The working direction of all the controls will be reversed after setting! The motor is in setting state Click the down button once Soft start It is effective only when the the Ω. remote in use has been learned! The motor is in Click the middle Done setting state button once Motor networking Quickly click the setting Add devices through Done button for 3 times apps or smart speaker ●The indicator goes out in 6 Speed setting seconds automatically if 00 there are no more operations. 9. ٥. Quickly click the setting Click the setting button, 3 levels are settable. Done button for 4 times the flash times of indicator shows the speed levels Default speed level is 2. Reset (Clear Code) The motor is in Long press the setting Done setting state button for 3 seconds

